




# THUNDERFORM®

## C1500EX-07 Installation Guide

Chevrolet/GMC 1500/2500 Extended Cab 2007 - UP  
(Loaded/Amplified)

### STEP 1:

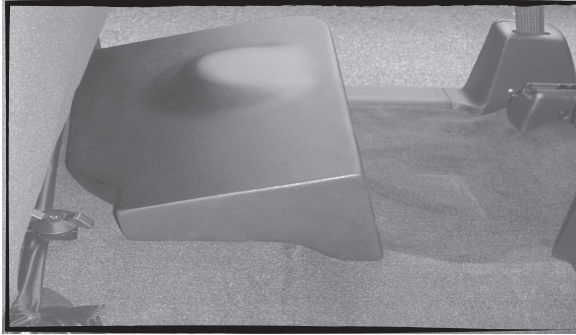


Flip up the driver side rear seat and place the enclosure on the floor as shown above. The enclosure should be inside the seat trim when the seat is in the lowered position.

### STEP 2:



Attach the mounting bracket to the enclosure as shown using (2) 2" screws to attach the bracket to the floor, and (1) M6 bolt to attach the bracket to the enclosure.

### STEP 3:

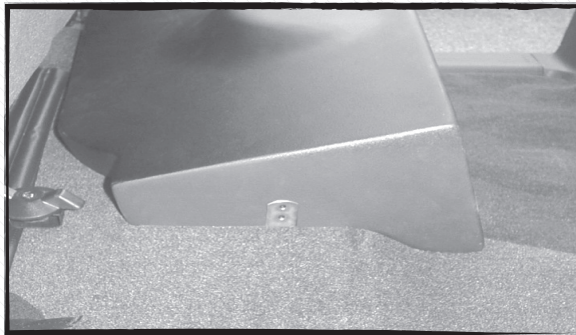

From the passenger side, attach the second bracket to the enclosure as shown. Use the same screws from Step 2.

### STEP 4:




Make all final wire connections (See Page 2) and fold the seat down. Your installation is complete. Enjoy your new bass in a small space.

**C1500EX-07 Installation Guide**

Chevrolet/GMC 1500/2500 Extended Cab 2007 - UP  
(Loaded/Amplified)

**Speaker Level Wiring**

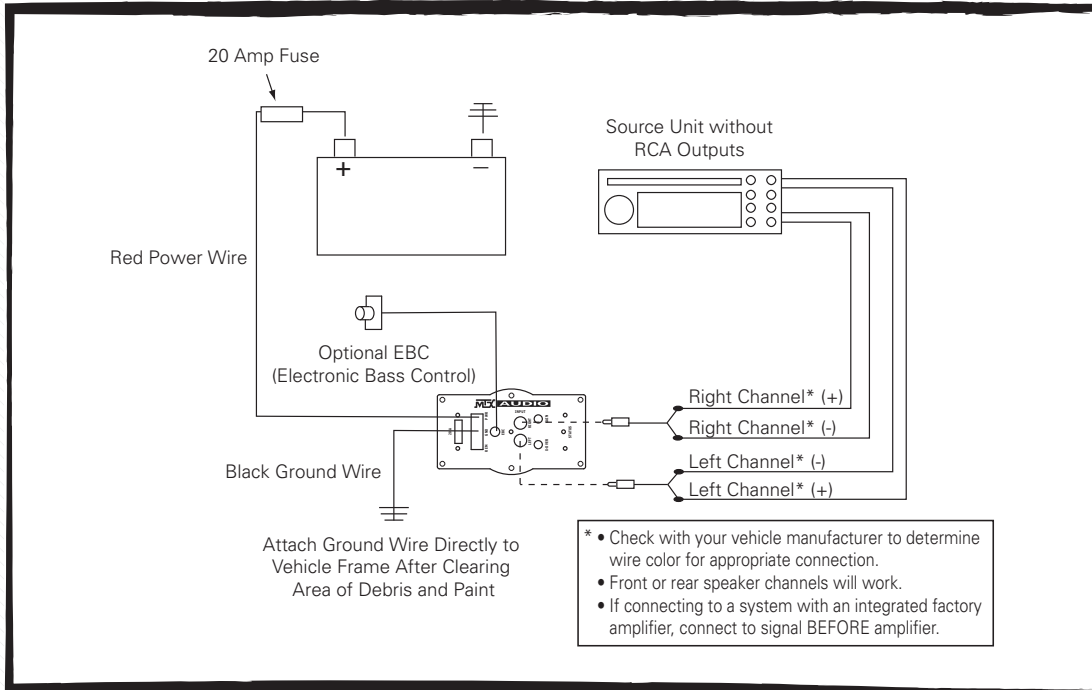

**RCA Interconnect Wiring**

